

1.function:

- 1.run automatically when power is applied (inserted CF card,SD card or USB device) ;
- 2.Support file format JPG , MP3 , MPG1/2/4 , DVD, DIVX ;
- 3.With timing function ,you can set the time to power on /off automatically,7days and 24 hours no personal operation ;
4. with different style between pictures change, and you can set the interval time.
5. support calendar and time showing.
6. with OTG function, you can copy files from USB to CF card directly.
- 7.with password (when power on or change the files in the CF card,you have to input the password).
- 8.with selection function.(if you want to play a file in CF card,for example, number 1 file, you just need to press the related serial number 1 on remote control)
9. support software upgrade.
- 10.

| | |
|----------------------|--------------------|
| Input voltage range | 90Vac to 264Vac |
| Normal voltage range | 100Vac to 240Vac |
| Frequency range | 50Hz/60Hz |
| Power dissipation | ≤35W, 240Vac input |

2.remote control illustration :



Press one time power off, press again power on.



Press one time showing, press again time off.



in **stop** status, press this button you can see attributes information(**image 2**)



press one time audio off, press again with voice.



menu setup;



enter;



voice control



up down left right



once the machine connected two or more card ,this button for selection(**image 1**)



, for select files before or behind the present program



stop;



repeat one/repeat all;




Play/pause.




9 setup the brightness and contrast ratio

select any number on remote control,it will play the related file.

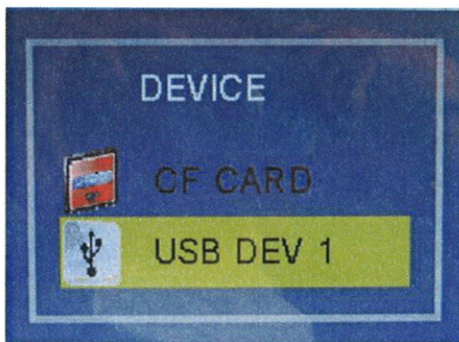

(image 1)

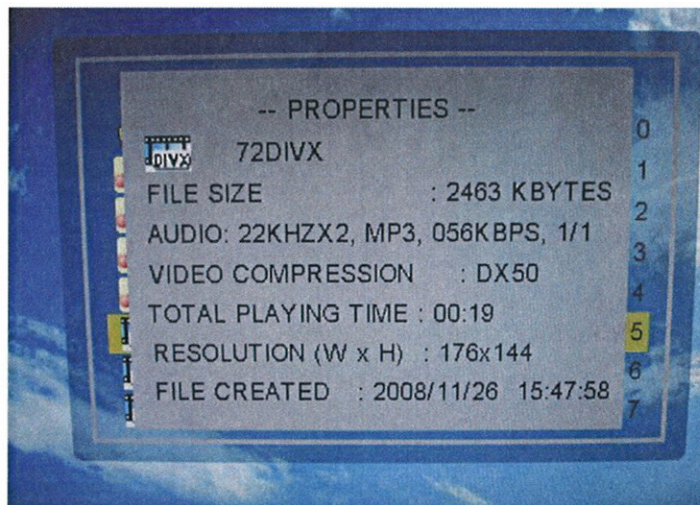

(image 2)


3. concrete operation

3.1 power on without card show" NO MEDIA" (image 3)it will run automatically with card inside.





(image 3)

3.2 on stop status, press , display as follows (image 4)

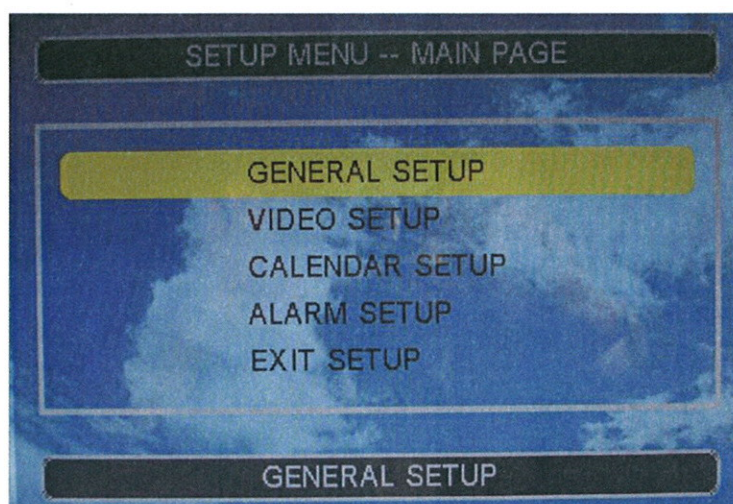


(image 4)

3.2(1) press  from "GENERAL SETUP", show as follows

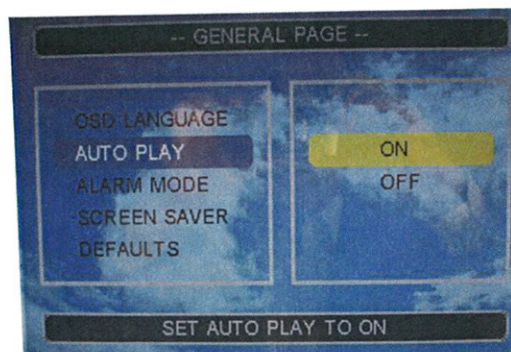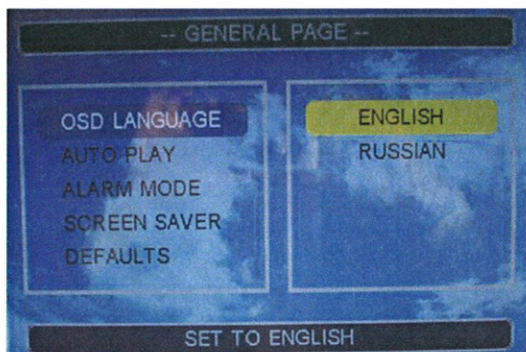

(image 5)

Set language

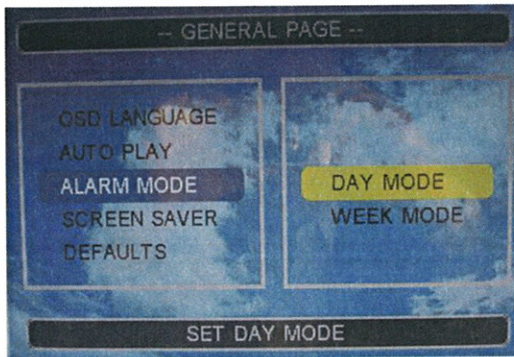


(image 7)

Five timing period of power on/off,
with day mode or week mode


(image 6)

whether play automatically when power on

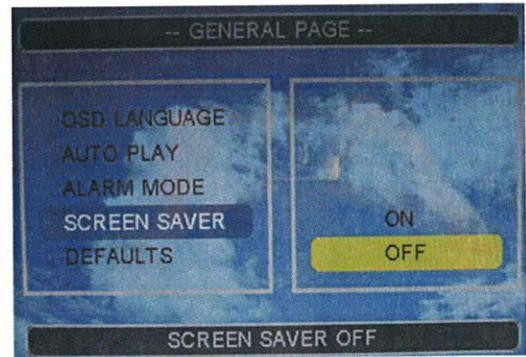


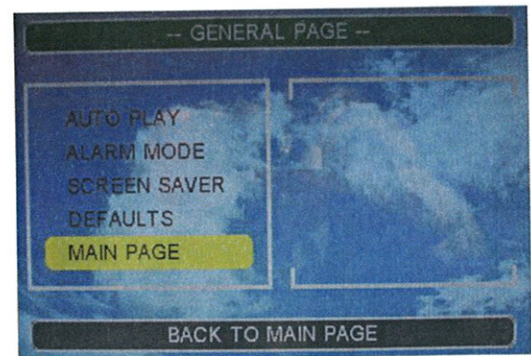
(image 8)

screen saver

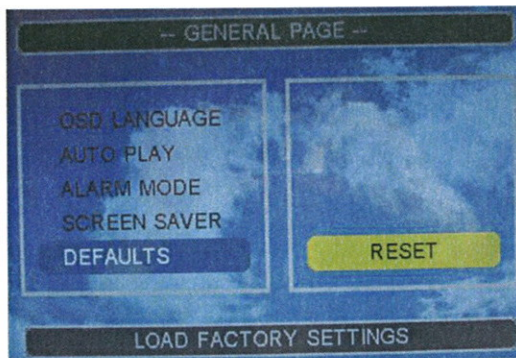

(image 9)



Press  for defaults set



(image 10)


press  back to menu

3.2 (2).  from "VIDEO SETUP" as follows:

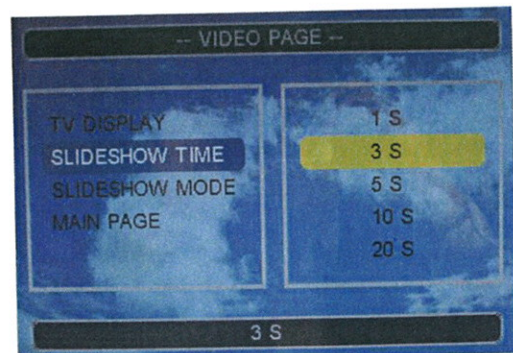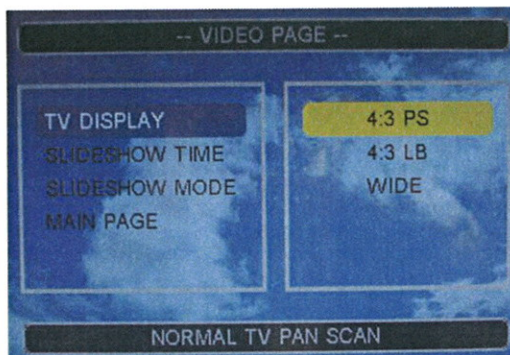

(image 11)

Set screen display proportion

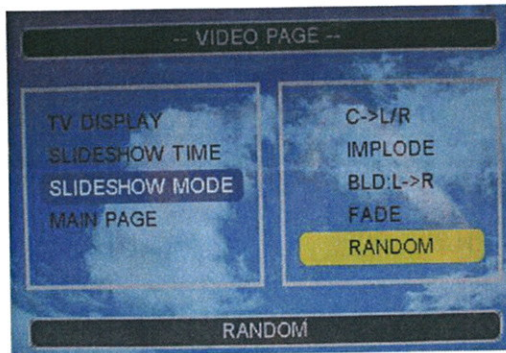

(image 13)

Set different styles in pictures changing

(image 12)


interval time between pictures change




(image 14)

back to menu

3.2 (3).press  from "CALENDAR SETUP" as follows

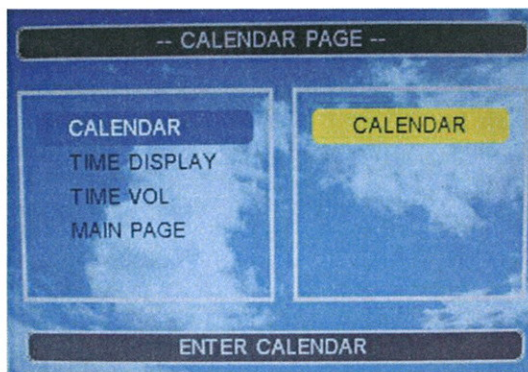



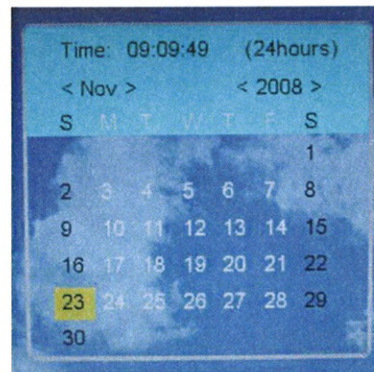




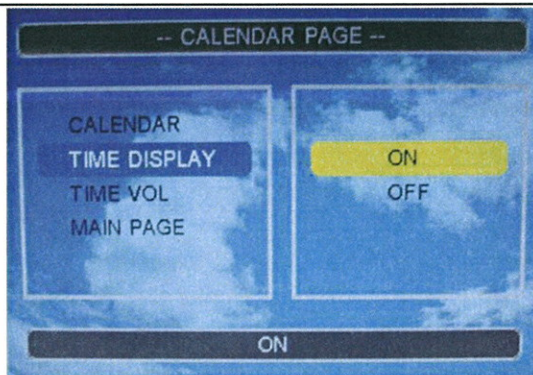
(image 15)




(image16)

press  to calendar (image 16)

press ,  move to the position that you want to change. And then use , , ,  to change the number. And  for saving.



(image 17)

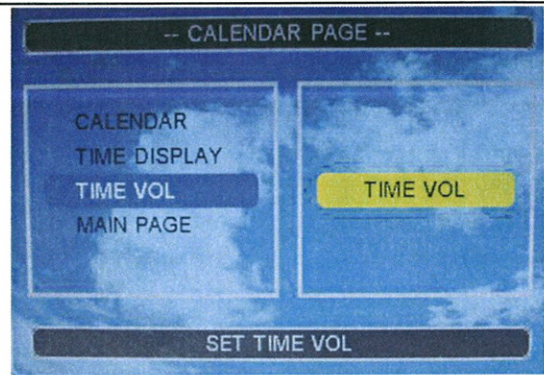


(image 18)

You can set the present time showing (image 17)



can go into the 5 timing functions' voice set (image 19)

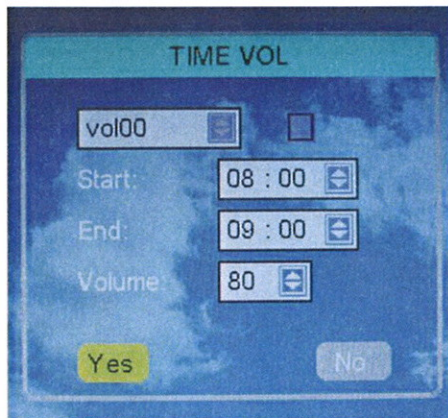


(image 19)

use , , , , , ,

to set the voice volume in timing function ,

Then to save

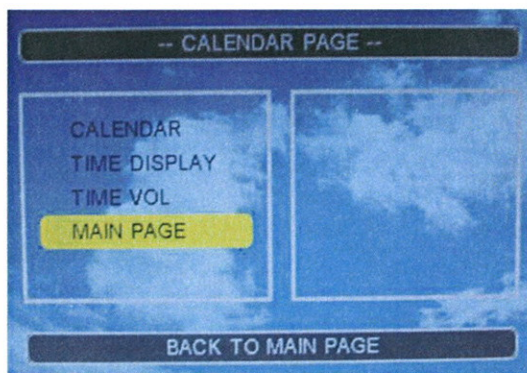


(image 20)




Back to menu


3.2 (4).from"ALARM SETUP" press the remote control  as follows:

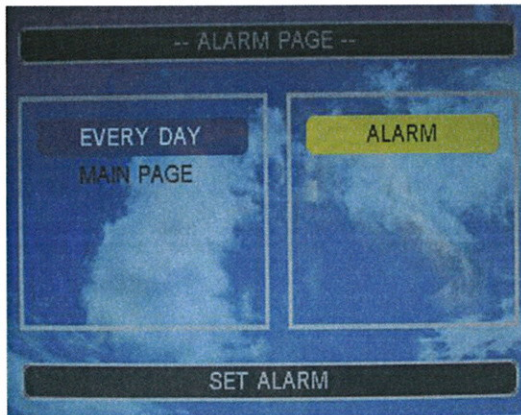


(image 21)

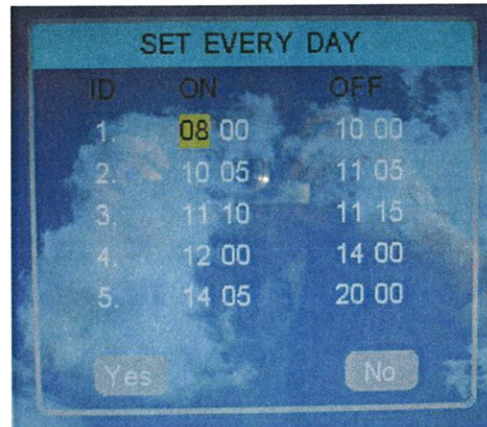


(image 22)

 into five timing set about power on/off interphase (image 22)

4.(1) As above mentioned (image 7) you choose **WEEK MODE**, so (image 21) would be as follows, (image 23)

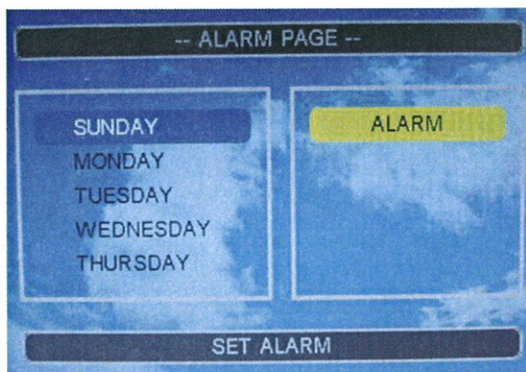


(Image 23)

(2).  also enter into five timing interphase, operate as the above mentioned (image 22)

5. File copy operation:

If you want to renew the advertising files from USB into CF card, please operate as following:

(1).When there was CF card inserted; put in USB would have the following interphase:

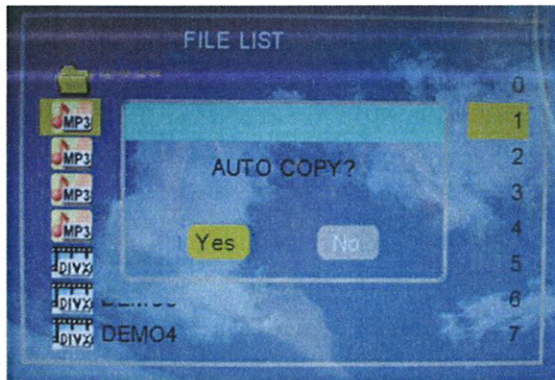


(image 24)



(image 25)

(2)Now give you presentation whether copy or not, move to **Yes**,press **ENTER** will have (image 25) interphase, and now you can see the process of all the files copy, then the files in CF card will be renewed(image 26)

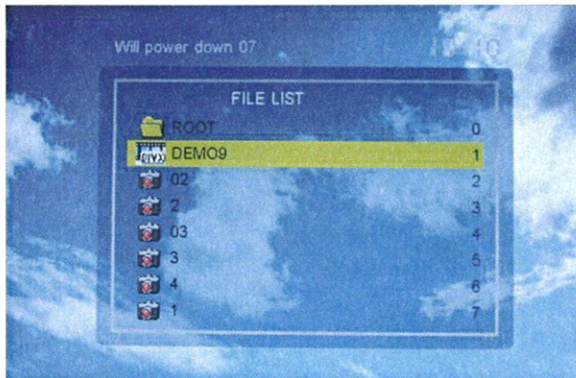

(Image 26)

6.password:

Press , , , , , , ,  and then "setup"

7. Error illustration:

| | |
|---|---|
| Power off or nothing display on screen. | 1. confirm whether the plug inserted 2. whether the switch turn on/off |
| No voice | 1. mute |

LCD ADVERTISING PLAYER'S USER MANUAL

| | |
|---|--|
| | 2. volume turn to 0 |
| Can not COPY from USB into CF card | Confirm whether CF\USB have been read |
| No effect of the remote control | Be sure the battery is available |
| Time is different to local time | Please check it once again |
| Top left corner show: will power down (..seconds)(image 26) | Its normal, since the present time is not included in the five different timing period of power on |